



M211 Motorcycle  
Tire Pressure Monitoring System(BLE)

User Manual



**Orange Electronic Co., Ltd.**

 
(Headquarter) 5F, NO.29, Keya Rd. Central  
Taiwan Science Park, Taichung 42881, Taiwan  
service@orange-electronic.com

Make	Model	Year
SYM	Joymax Z+	2022->
	Maxsym 400	2022->
	Maxsym TL	2019-2022
	Joymax Z 300i ABS	2019-2021
	MMBCU	2022->
	4MICA 150	2021-2022
	DRG BT	2019-2022
	Fiddle DX	2022->
	Jinfacai 150	2022->
	New Duke 125	2022->
	Duke 125	2017-2022
	KRNBT	2022->
	4MICA 125	2021-2022
	JET	2022->
	JET	2017-2021
	Fiddle 125	2020-2022
	FNX BT 125	2019-2022
	VEGA 125	2019-2022
	Z1 attila 125	2022->
	Vivo 125	2019-2022
	Jinfacai 125	2022->
	Fiddle LT	2022->
	Woo 115	2022->
	Mii 110	2011->
Wind 100	2014->	
Woo E	2017-2022	
Make	Model	Year
KYMCO	CV3	2022->
	DTX 360	2021-2022
	G-DINK CT300	2017-2022
	Xciting S400 TCS	2017-2022
	GP 125	2017-2022
	GP 125	2016->
	Many 125	2018-2021
	Racing S 125	2017-2022
	Gold 125	2017->
	Many110	2017-2022

Make	Model	Year
YAMAHA	YZF-R7	2022->
	YZF-R3	2017-2022
	YZF-R15	2022->
	MT-09	2017-2022
	MT-07	2017-2022
	MT-03	2017-2022
	XSR700	2019-2022
	XMAX 300	2017-2022
	Tricity 300	2021->
	TMAX 560	2019-2022
	TMAX 530	2017-2018
	NMAX 155	2020-2022
	FORCE 155	2017-2022
	SMAX 155	2017-2022
	AXIS Z	2022->
	CYGNUS GRYPHUS 125	2019-2022
	Cygnus-X(NEW) 125 FI	2017-2018
	JOG	2020-2022
	Limi	2020-2022
	RS NEO	2019-2022
	Vinoora	2022->
	BWS 125 FI	2017-2022
	GTR 125	2017->
	Jin Feng Guang	2016->
	CUXI 115 IS	2017-2020
	RS Zero 100	2017->
	Vino 50 FI	2017->
EMF	2022->	
EC-05	2019-2022	

The compatible models are provided for reference only.

Whether the wheel installation is compatible, depend on the actual specification.

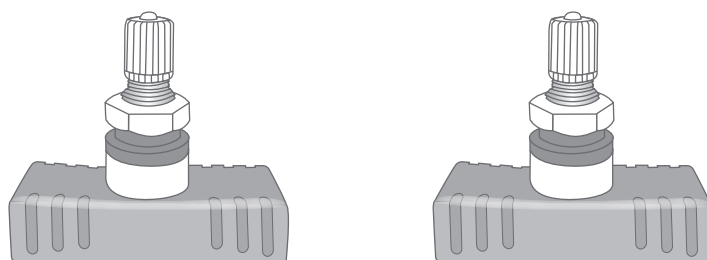

## Internal TPMS Sensor x2pcs

### Application:

The front and rear wheels meet the M2.5 specification, with a hole diameter of 11.5mm.

## Specifications

Working Temperature	- 40°C ~ 85°C
Working Humidity	Max 95%
RF Frequency	2.4GHz
Pressure Monitoring Range	0 ~ 116 psi
Sensor Weight	29.5 ± 3g

Note: Hex nut installation torque, 4.5 ~ 5N.m

# Before installation

## 1. Download the App

APP Version:


Support iOS 16.0 and above

Support Android 10 and above



## 2. Click "Registration"

Orange Moto TPMS




Account (E-mail)

Password

Remember me  ? Forgot Password


Login

Registration



## 3. Enter the data in sequence to log in

Orange Moto TPMS



Wang


Simon

simonwang@gmail.com

\*\*\*\*\*

I have read and agree to the Privacy Policy

Login




## 4. Click "OK" to enable Bluetooth connection

Orange Moto TPMS

Turn on Bluetooth

We need Bluetooth enabled on your device so we can set the product.

Cancel ok



# Getting started

1. The sensor ID is at the back of the sensor and on the packaging box. Please enter the data in sequence then click "Check sensor".

**Attention: Any changes to the settings must click "Read Sensor" to update settings.**

### Orange Moto TPMS

Nickname

License Plate

Front wheel sensor ID

Rear wheel sensor ID

Standard tire pressure setting

FW  Psi

 
RW  Psi

※The default value of "30", please refer to the vehicle manufacturer's recommended tire pressure value

**Read sensor**




2. Please wait a moment, and you will receive the tire pressure and tire temperature information on APP.

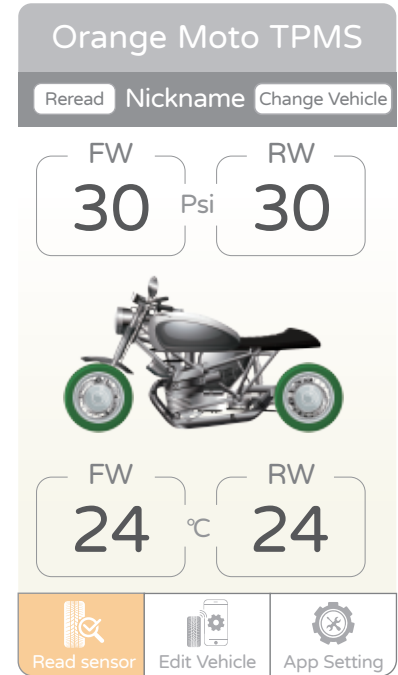


## System Alarm

 **Abnormal tire pressure:** the tire pressure symbol, wheel position diagram, and tire pressure value will be shown in red.

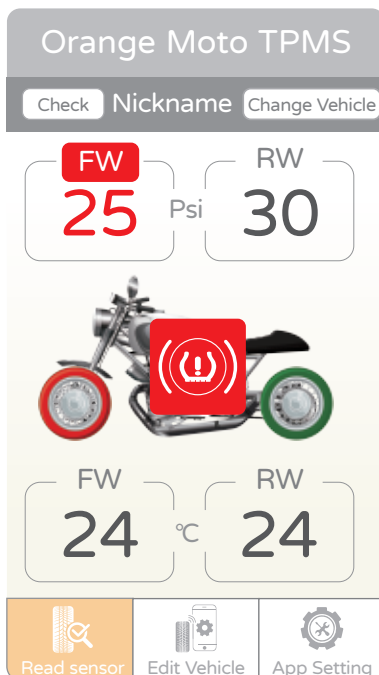


 **Abnormal tire temperature:** the tire pressure symbol, wheel position diagram, and tire temperature value will be shown in red.

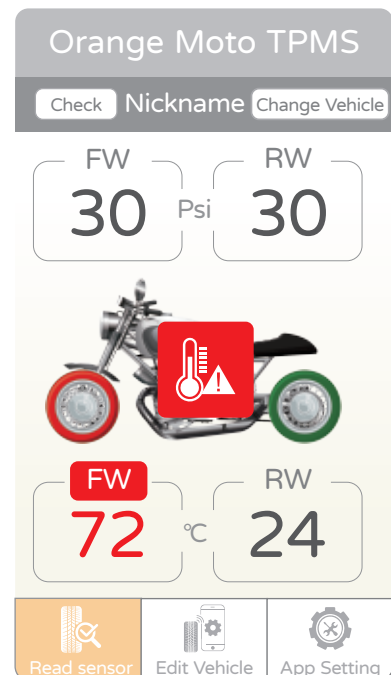


# Add or edit vehicle information

 
1. Select "Vehicle setting"

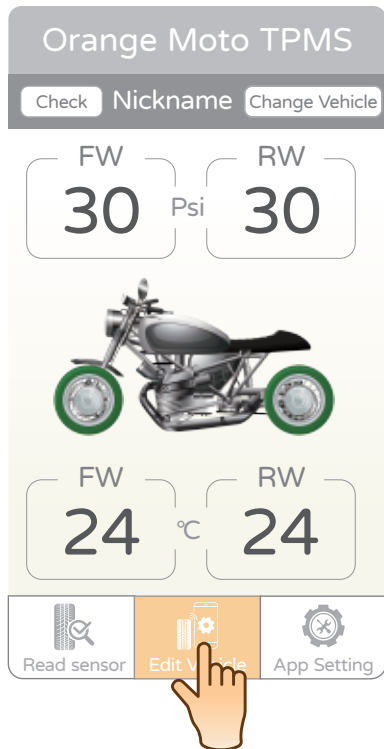

 
2. Click "+" to add vehicle, and click plate number to edit vehicle.

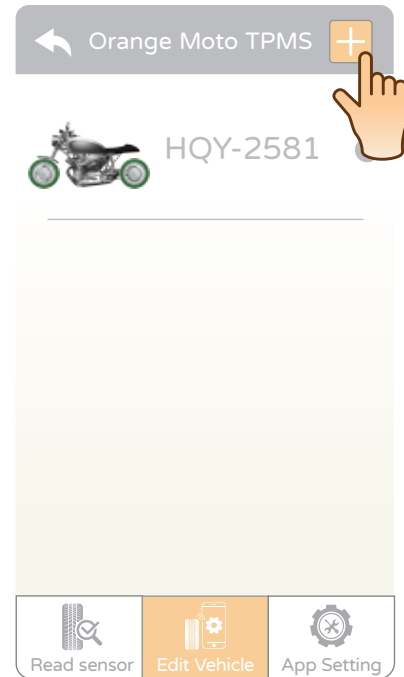

 3. Enter the information of another vehicle in sequence and click "Check sensor". To change the displayed image of your own vehicle, click on the camera icon inside "Vehicle photo" and take a photo.

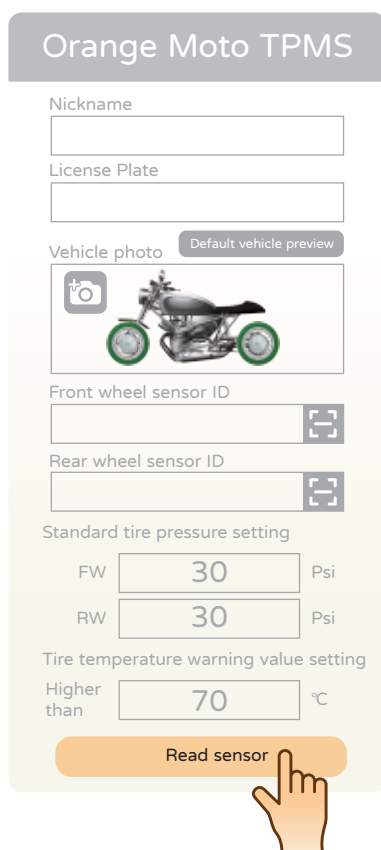

 4. Please wait a moment, and you will receive the tire pressure and tire temperature information.

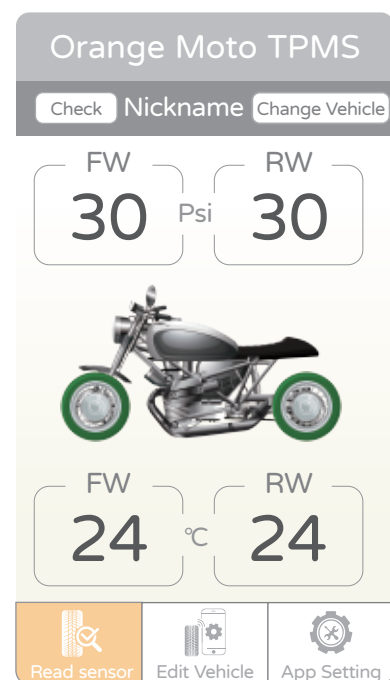

# Change Vehicle

1. One mobile device can be paired with multiple vehicles. Click "Change Vehicle".
2. Select the vehicle you want to change, and you can change the displayed vehicle.

